



1. Clean the outside surfaces of the bath or shower tray in preparation for the Homelux Shower Seal and make sure there is no residue of any cleaning product left on the tray.

2. Cut the seal to the correct length and peel off all of the backing tape. Firmly stick the adhesive strip to the outside edges of the tray where it will meet the walls. Press with a roller or similar tool to ensure 100% contact of the adhesive.

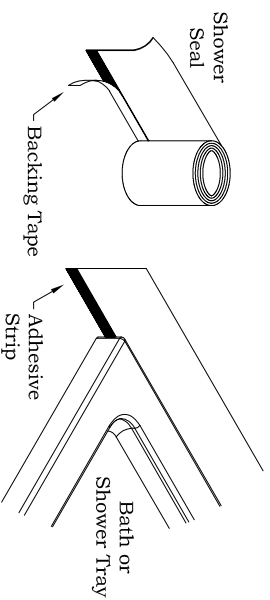


4. Using the same adhesive and trowel, cover the walls and visible areas of the Shower Seal.

5. Apply the pre-cut Homelux Wall Matting, overlapping the Shower Seal as shown below.

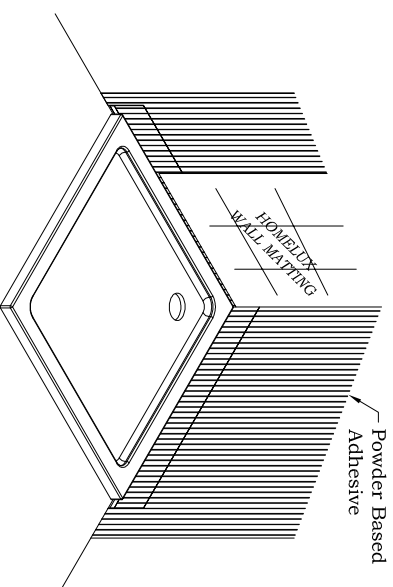

3. Using a notched trowel, apply powder based flexible adhesive to the walls along the area where the Homelux Shower Seal will sit and press the Seal and tray in place. Smooth out any air pockets and excess adhesive.

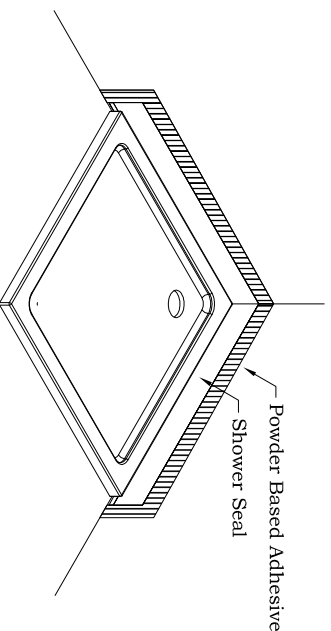

6. Completely cover the walls with the Homelux Wall Matting in accordance with the matting instructions.

7. Apply the Homelux Floor Matting, Joint Tape and Corners.

